

Chip Repair



Tools and accessories
needed for repair

- Heat Gun
- Smooth-On
- Paint kit and rags
- 100 grit sand Belts and Porter Cable




Mix Smooth- on and Fill the chip or broken Piece make sure to mix the Smooth On correctly 50/50 ratio.



- Then using a heat gun start to heat up the smooth-on be sure to keep the heat gun at least 6 inches away from the patch. Placing the heat gun too close may cause the adhesive to gum up. If you don't have a heat gun let the smooth-on harden on its own this could take up to 6-8 hours depending on the temperature.



- Then using a Porter Cable with a 100 grit sand belt sand the top and edge of the piece.

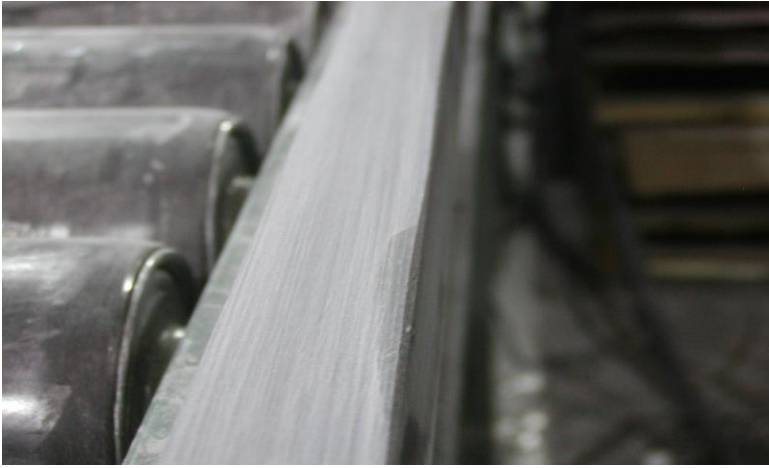

-
- After sanding with the porter cable use a sand belt and blend in the area that has been sanded.



- Then using the epoxy edge paint proceed to paint the sanded edges. Be sure to follow the instructions on the quart can.





Finished piece

