

Procedure for leveling Island Runs

Items needed

- Straight 2x4
- 4 c-clamps
- Rubber Mallet
- Wood Wedge






-
- Flush the outside edges of the Island run and place a c-clamp on both sides. Once the c-clamps are placed on the two tops. Place the 2x4 on the side of the piece that has a crown then clamp the 2x4 down on both sides of the Island Run.



-
- In the photo above the top has a crown over 1/16 this a marine edge top so a wedge will need to be placed under the 2x4 to remove the crown. If the piece was a flat top a wedge may not be needed.

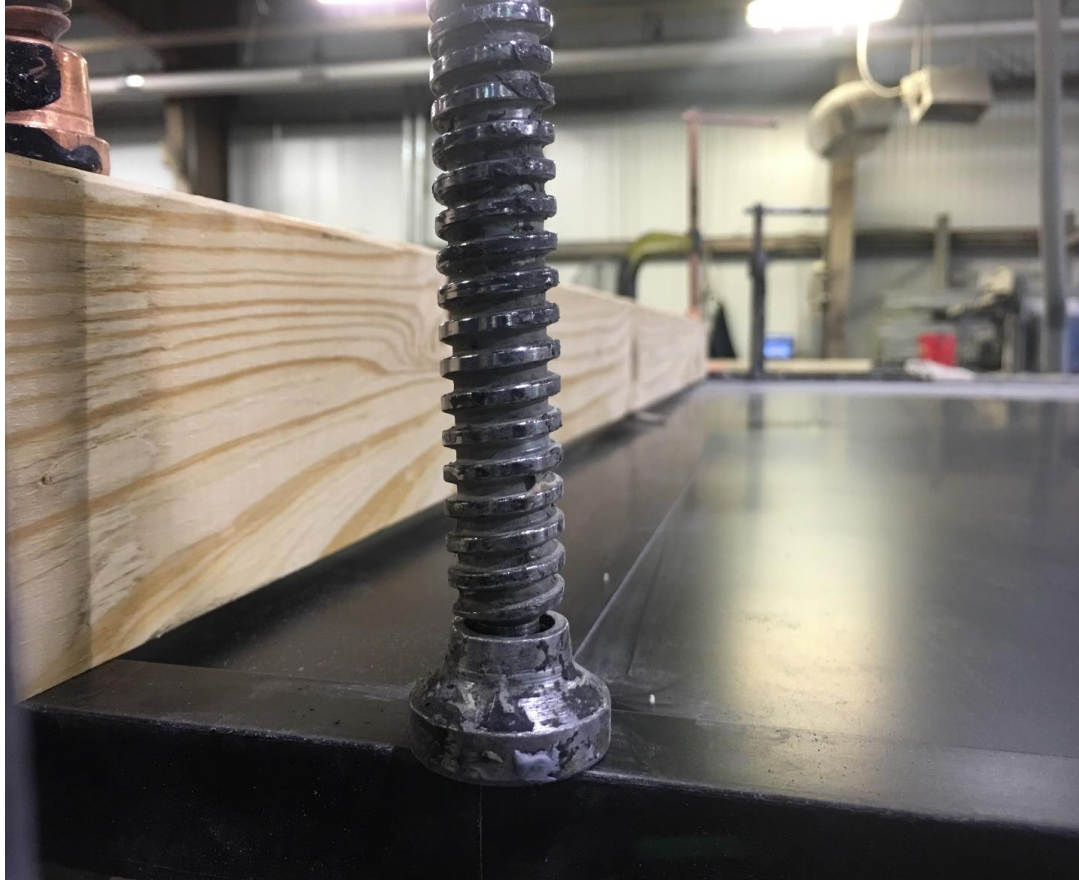

- Once the wedge is in place the crown is removed and the installer can then fill the seams.